TRISEP® DS Food & Dairy 5838 UPO05 Series



TRISEP® sanitary membrane elements for food & dairy applications have a long history of outstanding, stable field performance. NADIR® UPO05 polyethersulfone (PES) membrane with a nominal 5,000 Da molecular weight cut-off offers the highest protein rejection in the industry for membranes with this cut-off. In field studies UPO05 membrane had as much as 75% less protein passage than competitive membranes. TRISEP elements are available with a number of different feed spacers and in all sizes common in the industry. TRISEP DS elements are built with FDA compliant materials, are compliant with European food regulations (EU 10/2011 and EC 1935/2004) and comply with USDA standards.

MEMBRANE CHARACTERISTICS

Membrane	NADIR® UP005		
Membrane Type	Polyethersulfone (PES)		
Nominal M.W.C.O. (Da)	5,000		

DESIGN INFORMATION

Model	Membrane Area m² (ft²)	Feed Spacer Thickness (mil) ^a	
TRISEP' DS UP005 5838-46	14.O (151)	46	

a All models on this sheet have a netting outer wrap and diamond shaped feed spacers.

OPERATING PARAMETERS

Maximum Operating Pressure	10 bar (145 psi)	
Maximum Operating Temperature	50°C (122°F)	
Cleaning pH/Temperature Range ¹	1.5 – 11.5 at 50°C (122°F)	
Cleaning Chlorine Tolerance	200 ppm for sanitization at pH ≥ 10.5	
Maximum Pressure Drop1 bar (15 psi) per element; 4 bar (60 psi) per housing		

¹ Refer to temperature and pH limits in Membrane Cleaning Guide – Food & Dairy: UF & MF Elements (TSG-C-004).




PHYSICAL DIMENSIONS

Model	Element Weight kg (lb) ^b	Dim. A mm (inches)	Dim. B mm (inches)	Dim. C ^c mm (inches)	Permeate Tube
TRISEP* DS UP005 5838-46	11 (24)	965 (38.0)	147 (5.8)	28.9 (1.138)	Female

b Shipping weight is dependent on packaging material and quantity shipped.

c Dimension "C" is the Inner Diameter.

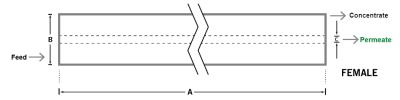

IMPORTANT INFORMATION

Start-up: MANN+HUMMEL Water & Fluid Solutions recommends flushing elements for 30 minutes at low pressure and

discarding permeate during the flush prior to operation. For a more detailed start-up procedure, please see

Element Start-Up Guide - System Start-Up (TSG-O-005).

Cleaning: TRISEP® membrane elements must be cleaned periodically to ensure proper operation and to prevent

membrane damage. Please see Membrane Cleaning Guide - Food & Dairy: UF & MF Elements (TSG-C-004).

Storage: TRISEP membrane elements must be stored appropriately to ensure proper operation and to prevent

membrane damage. Please see Element Storage Guides (TSG-O-009 & TSG-O-010).

Regulatory: All models on this sheet conform to USDA 3A sanitary standard 45-03, use FDA (CFR Title 21) compliant

materials, comply with EU regulation (EC) No. 1935/2004 and No. 10/2011, and have Halal and Kosher

certifications.

CUSTOMIZABLE SPECIALTY ELEMENTS

MANN+HUMMEL Water & Fluid Solutions offers a full range of membranes and element designs for challenging water and process applications. Technologies include low-fouling RO, submerged UF, continuous high temperature, ultra-high pressure, unique sanitary designs and more. Contact us to customize a product that satisfies your specific requirements.



Germany: +49 611 962 6001 Italy: +39 0721 1796201 info@microdyn-nadir.com Americas USA: +1 805 964 8003 sales.mnus@microdyn-nadir.com Asia Singapore: +65 6457 7533 China: +86 10 8413 9860 waterchina@mann-hummel.com

